
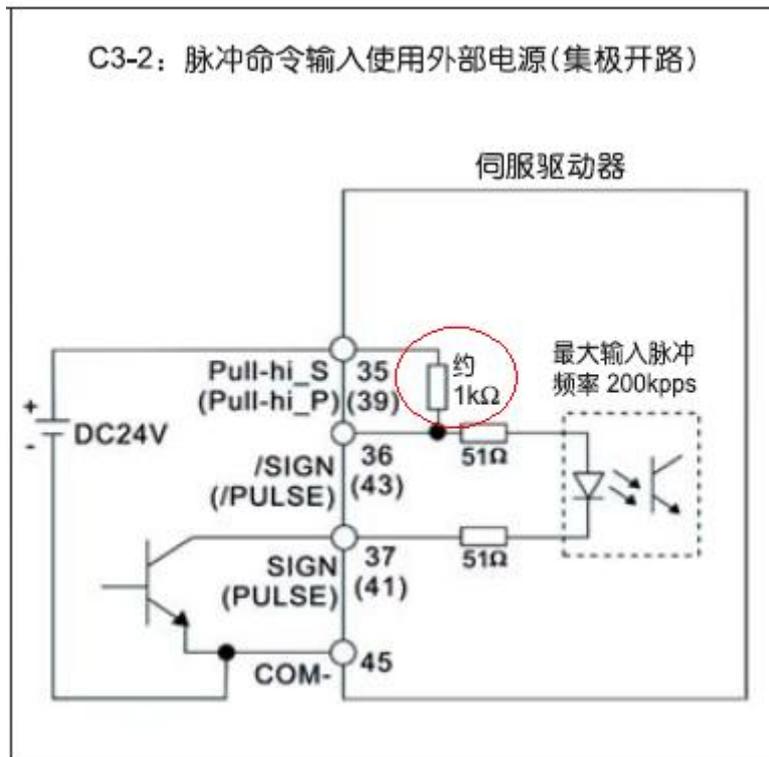


LXM23+与三菱 FX2N PTO 控制模式

1、脉冲/方向信号接线-本体晶体管输出模块：

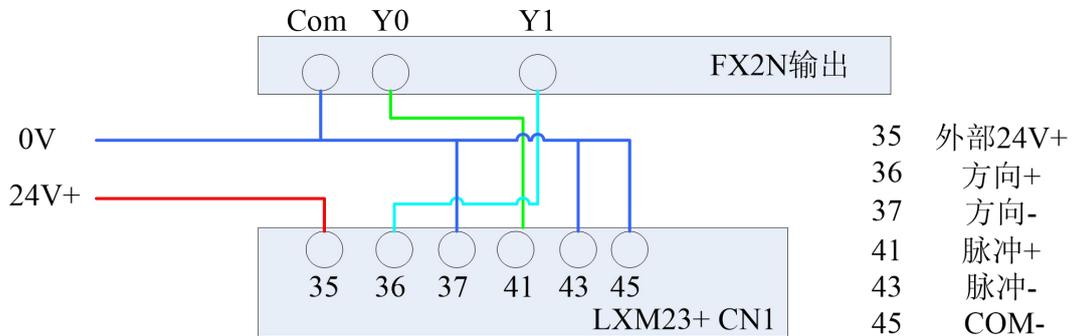

PTO 模式相关参数：

P2-15, P2-16, P2-17: 0

P2-68: 1

P2-10: 001

P1-00: 002 (红色位 0/1 决定电机正反转设定)



P1-01: 00

P2-8: 10 恢复出厂设置

P1-44: 齿轮比分子

P1-46: 齿轮比分母

2、驱动器报警反馈-扩展输入模块:

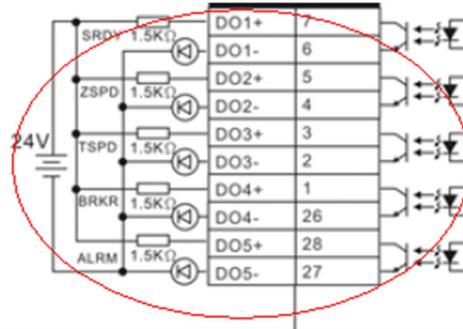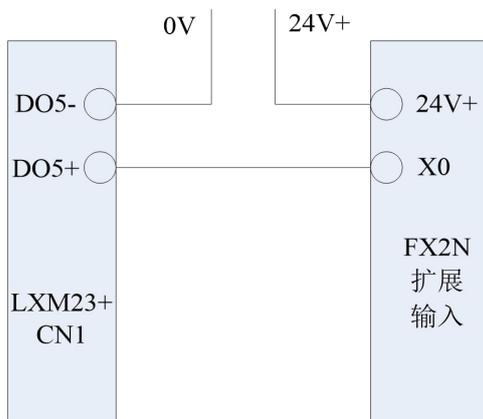

DO1: P2-18 101 伺服 ready

DO2: P2-19 102 伺服使能 ok

DO3: P2-20 100

DO4: P2-21 100

DO5: P2-22 7 伺服报警

注意: 若 p2-09 设为 000,则 DO5 将无效